



Table of Content

 
1. Multipurpose Chair Disassembly	2
2. Footring Disassembly	8
3. Stacking Chair Disassembly.....	10
4. Tablet Arm Disassembly	12
5. 4 Leg Stool Disassembly.....	13




Caper® Disassembly for Recycling Instructions

Multipurpose Chair Disassembly

Tool Required:




Flat Screw Driver

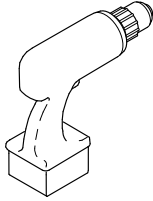

Power driver



 T-40 Torx
Driver



Hammer




Nose Plier



Safety Glasses



Socket

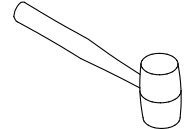


Rubber
Mallet


Materials Identification and Segregation:

Where possible, plastic components are marked with ASTM recycling codes. Use these codes to identify material type for recycling. Non marked components should be treated as mixed plastic. Ferrous metals can be identified using a small magnet for recycling. Non-ferrous metals should be separated and recycled separately.


Multipurpose Chair Disassembly:

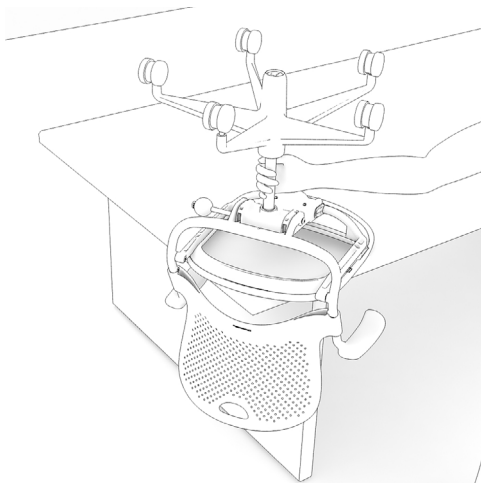


1. Invert chair on padded corner of table top.

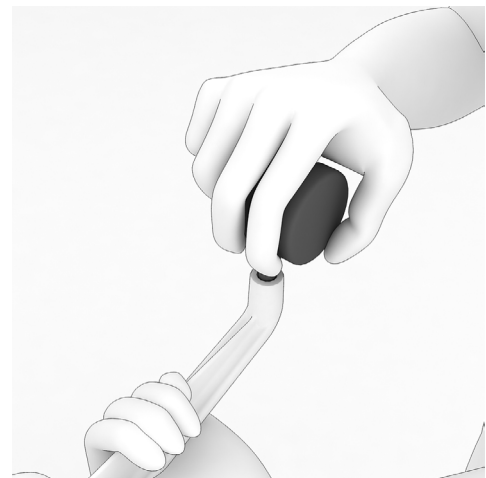


2. Hold base and pull hard to remove caster from base.

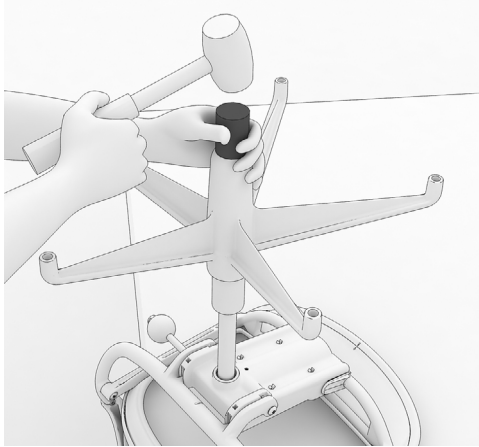


3. Using a 7/8" dia socket, or something equivalent, strike socket to dislodge the base from the cylinder.

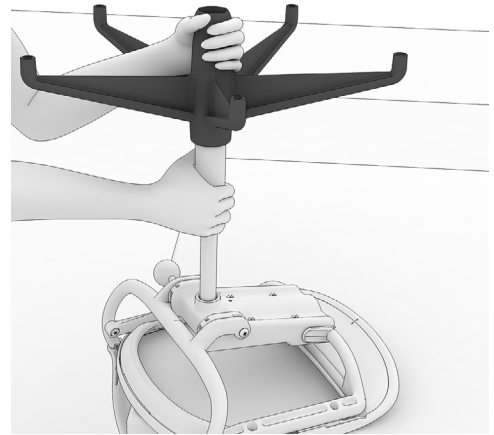


4. Lift the base from pneumatic cylinder and pull off.

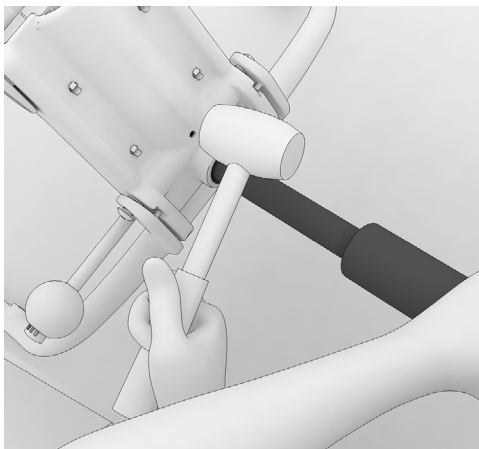


5. Remove cylinder from tilt by hitting bottom of tilt with mallet.

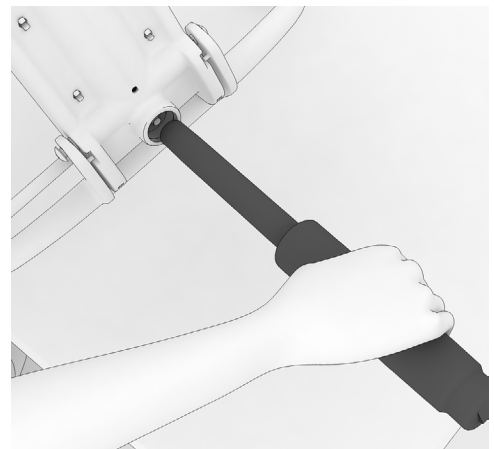


6. Pull out the cylinder from assembly.

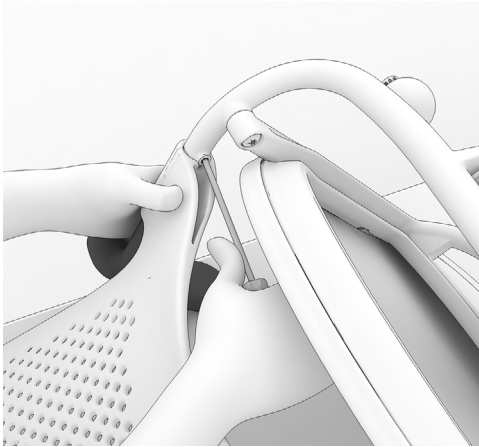


7. Using T-20 torx screwdriver, remove and properly dispose of set screws from yoke.

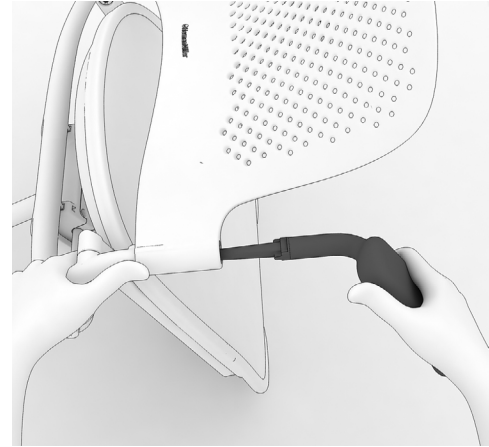


8. Pull arm out of back frame post.

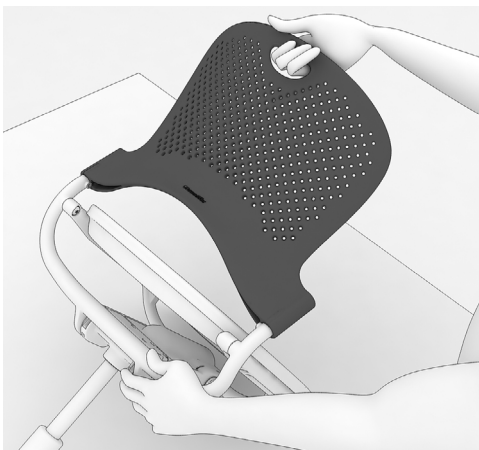


9. Pull back off frame posts.

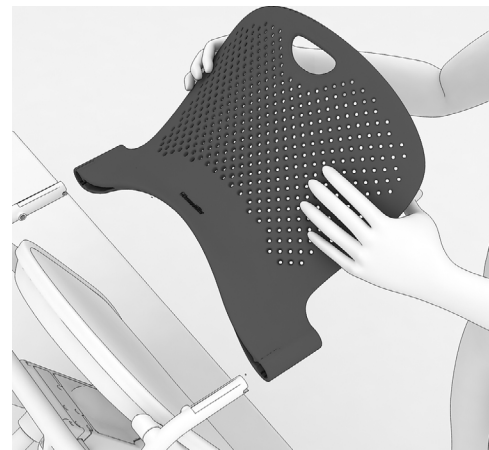


10. Remove the back properly.

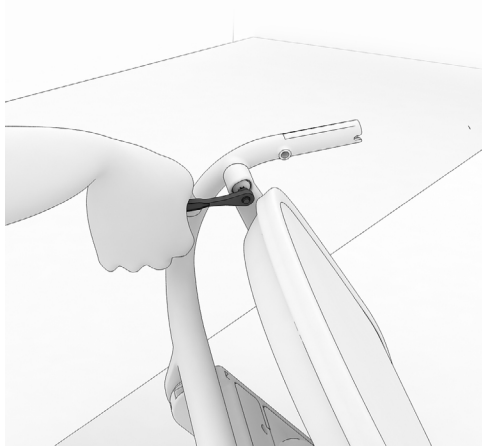


11. Using T-40 torx ratchet wrench service tool, remove fasteners from carriage.

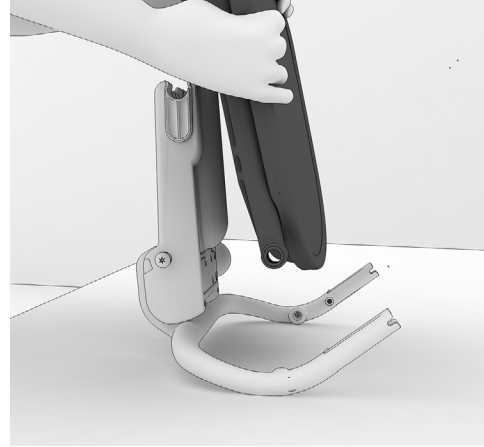


12. Remove the seat assembly from tilt.

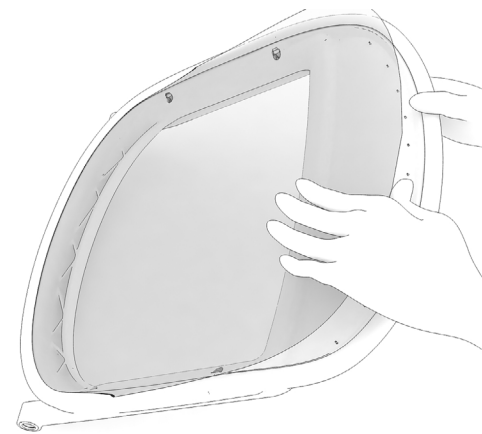


13. Cut the pellicle off and remove foam.

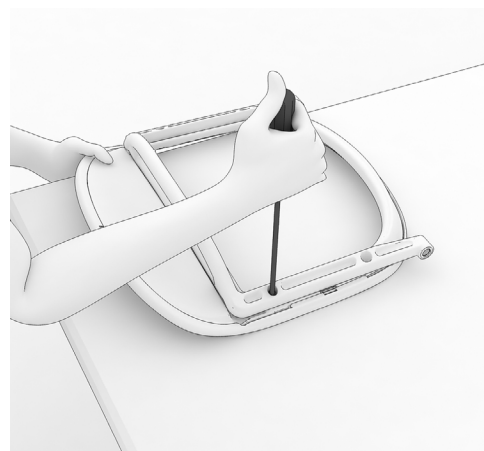


14. Using head screw driver remove the screws from seat pan.

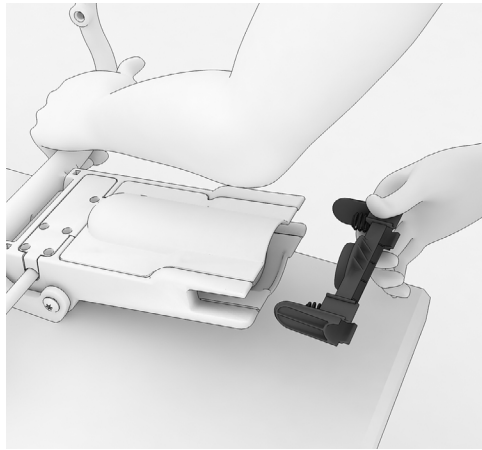


15. Pull guide bearing from carriage on seat.

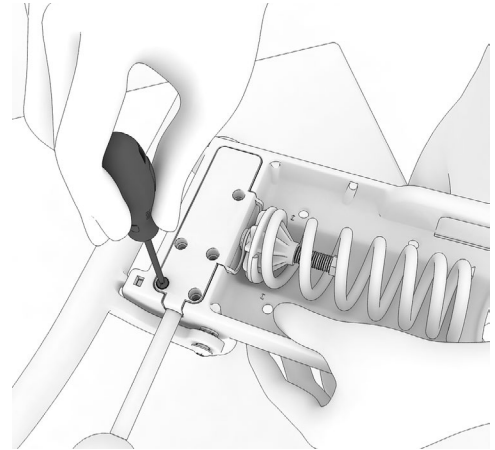


16. Using T-20 torx head driver remove torx head screws from gear retainer.

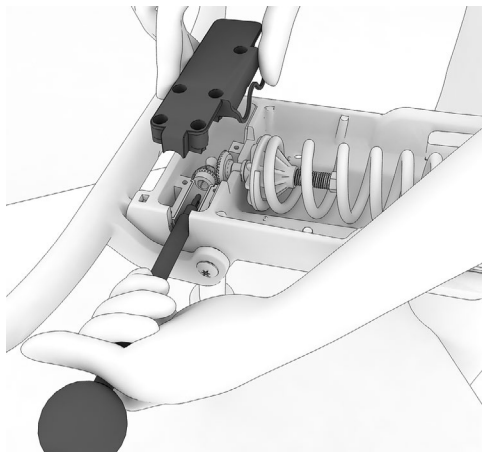


17. Remove gear retainer and lift knob from tilt assembly.

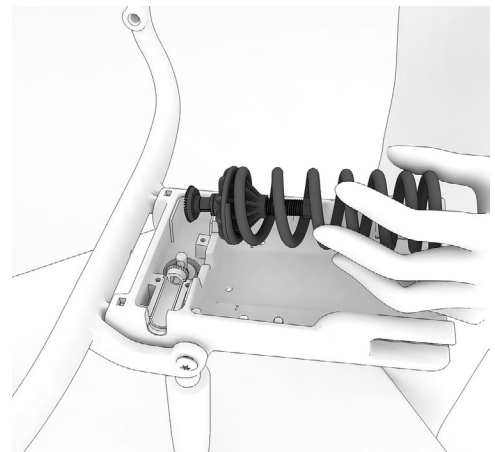

18. Remove spring and drivescrew from tilt assembly.

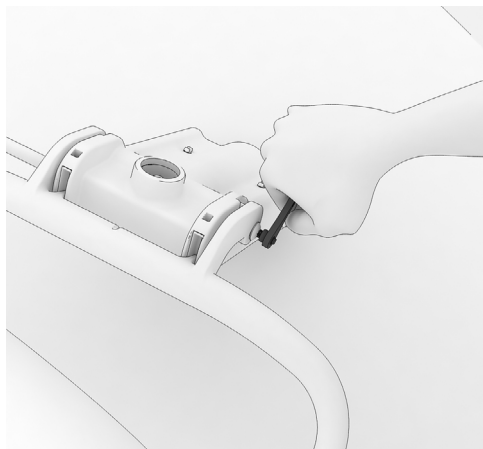


19. Using T-40 torx ratchet wrench tool, remove fasteners and bearing securing yoke to carriage and dispose of properly.

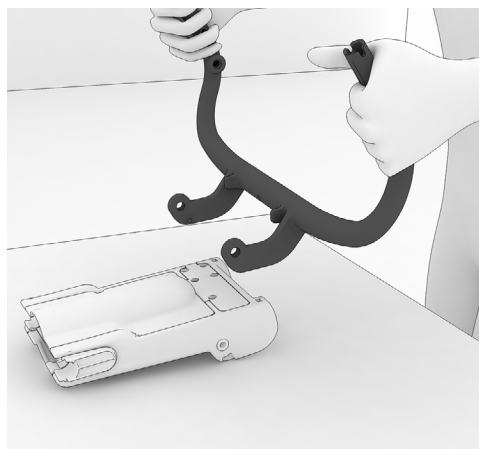


20. Remove yoke from tilt.




Footring Disassembly:

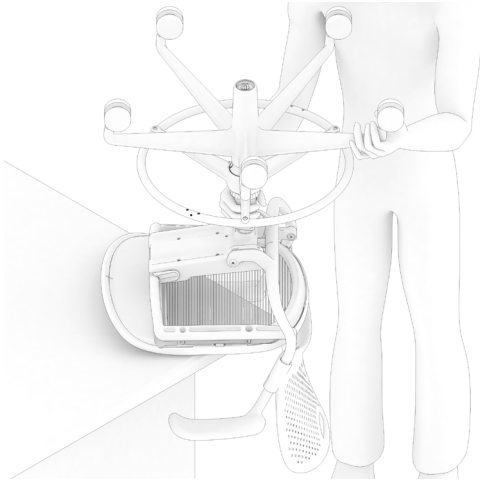


1. Invert chair on padded corner of table top.

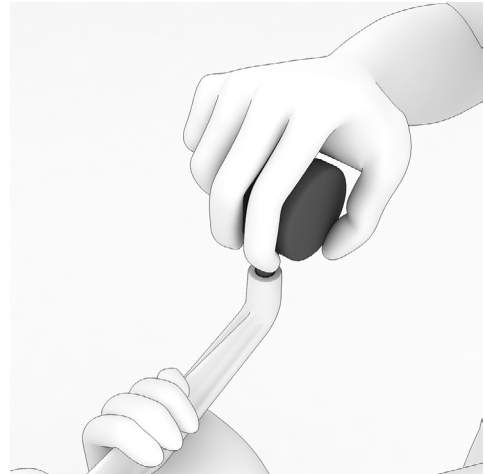


2. Hold base and pull hard to remove caster from base.

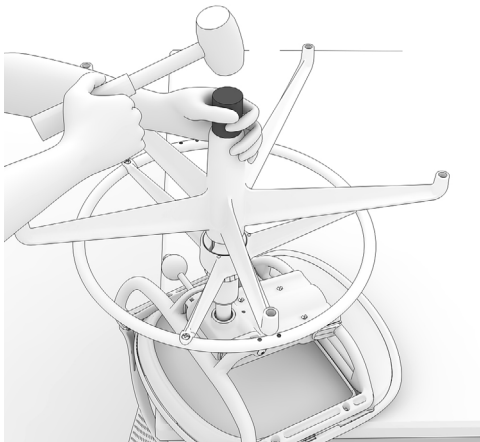

3. Using a 7/8" dia socket, or something equivalent, strike socket to dislodge the base from the cylinder.

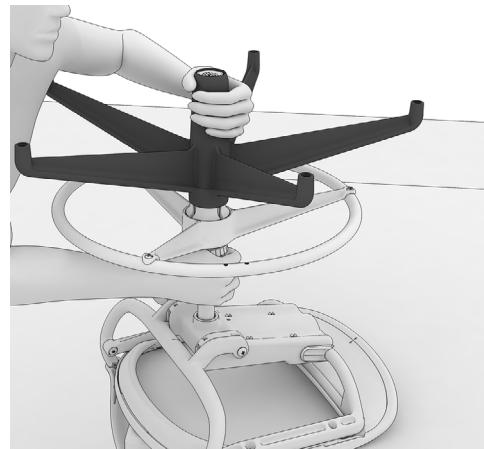


4. Lift the base from pneumatic cylinder and pull off.

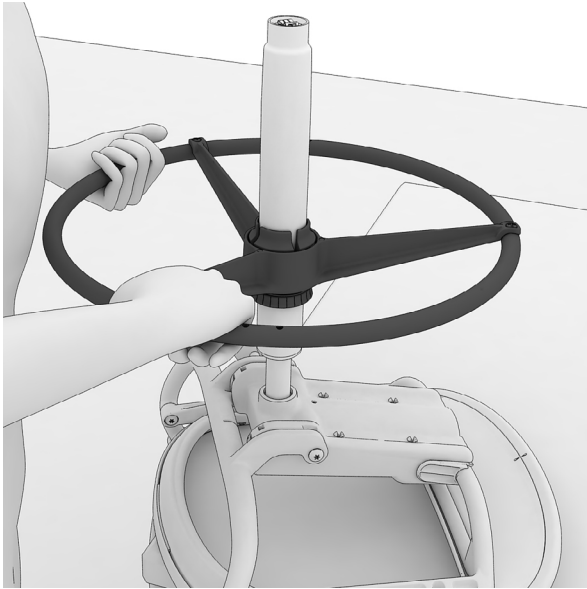


5. Lift the footring from pneumatic cylinder and pull off.




Stacking Chair Disassembly:

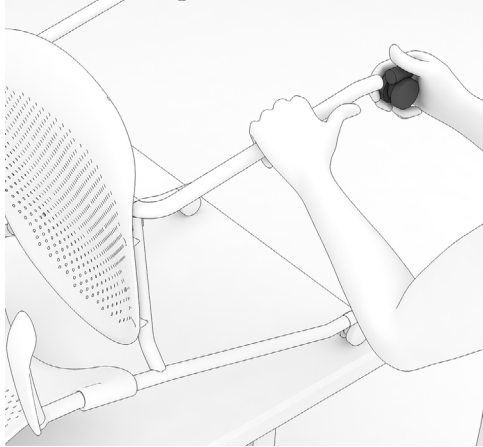


1. Removing castor or glides.

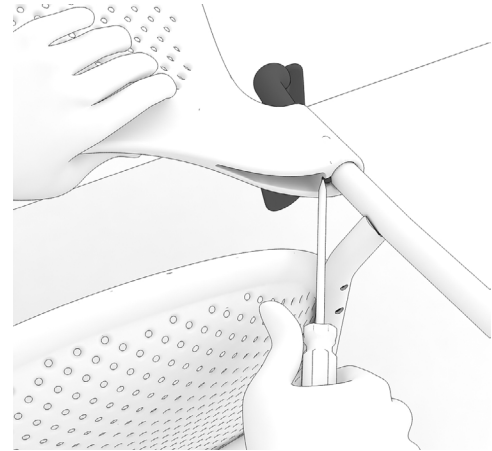


2. View arm of chair from underside of back. Using small straight head screwdriver, depress spring pin from end of arm.

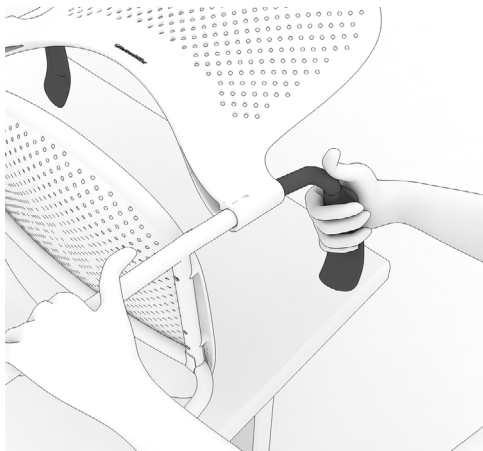


3. Pull arm out of back frame post. Repeat the steps 2 and 3 for other side.

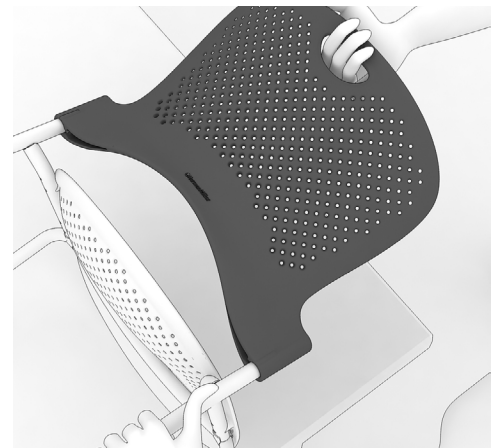


4. Pull back off frame posts.

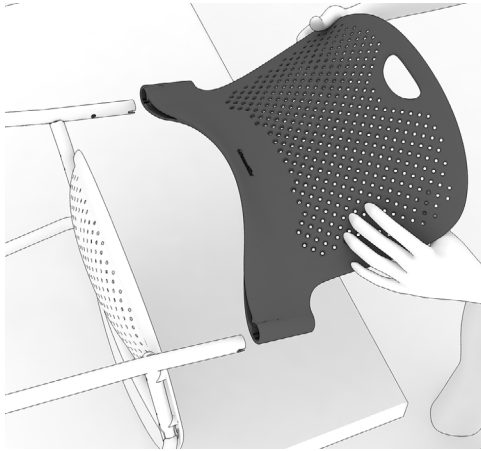


5. Remove the back properly.

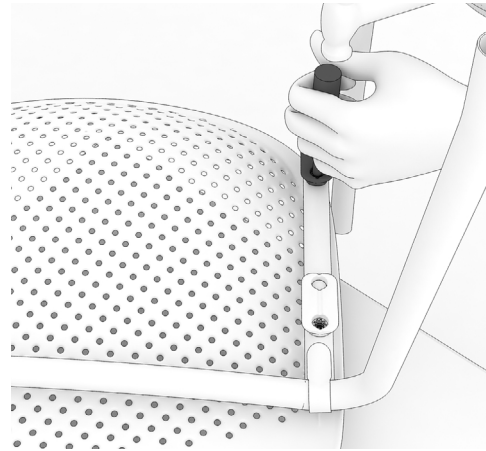

6. Using 1/8" punch and hammer, drive post fastener from push on fastener in bumper. Repeat procedure for other post fasteners.

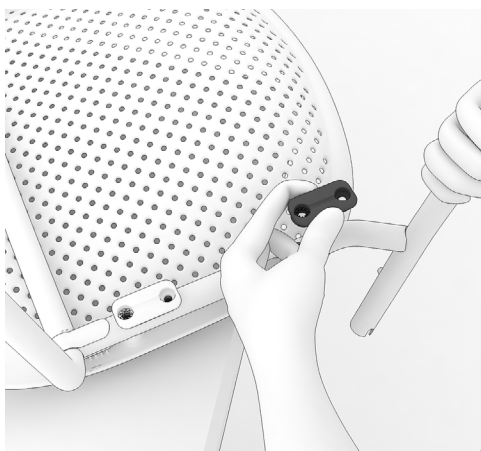


7. Remove bumpers from bottom of frame.

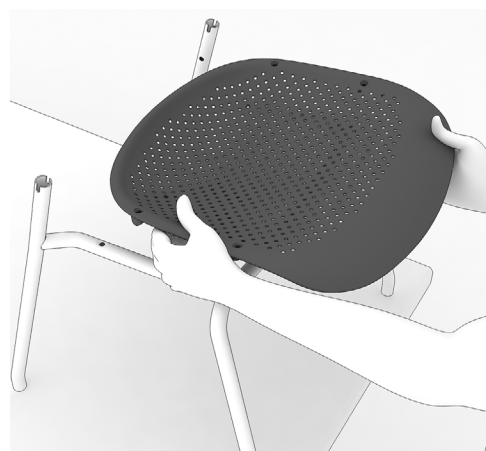


8. Remove the seat.




Tablet Arm Disassembly:

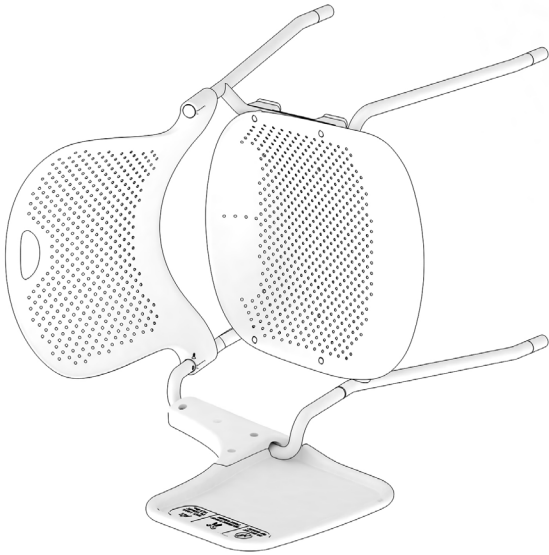

1. Lay the Chair on side.

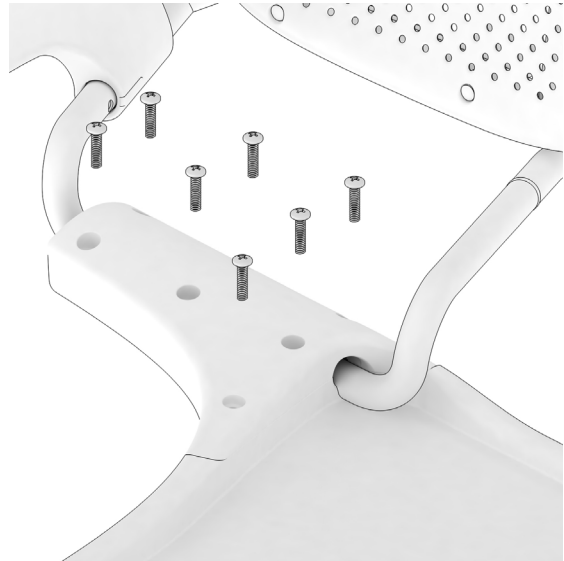


2. Remove cover to tablet with 7 pan head screws.

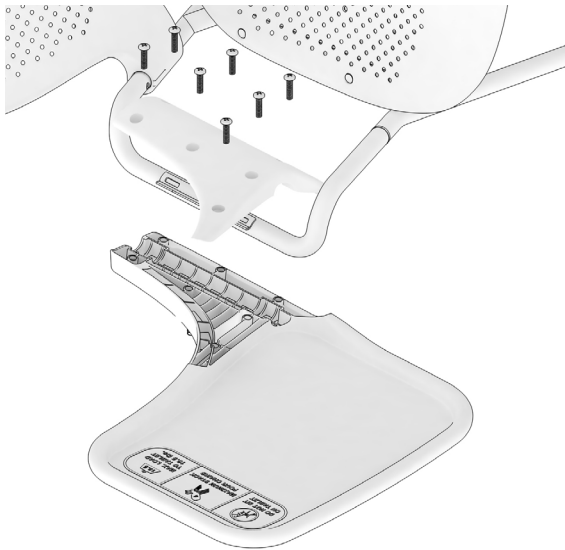


3. Takeout the Tablet Arm and Cover.




4 Leg Stool Disassembly:

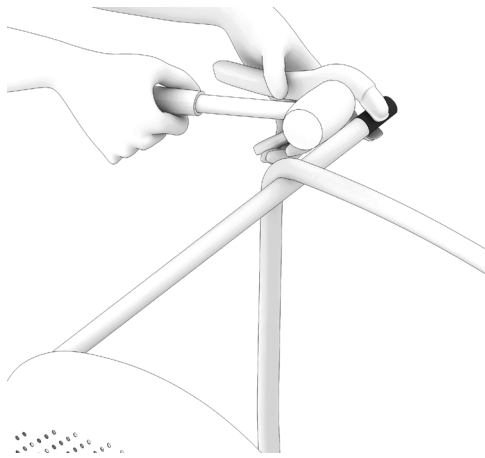


1. Removing caster or glides.

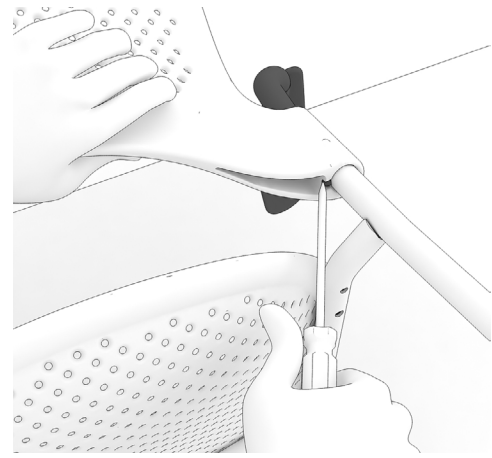


2. View arm of chair from underside of back. Using small straight head screwdriver, depress spring pin from end of arm.

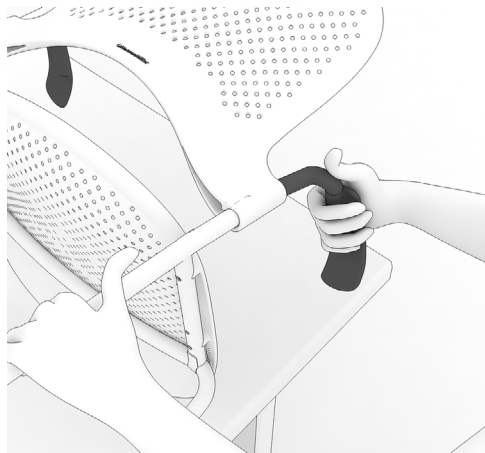


3. Pull arm out of back frame post. Repeat the steps 2 and 3 for other side.

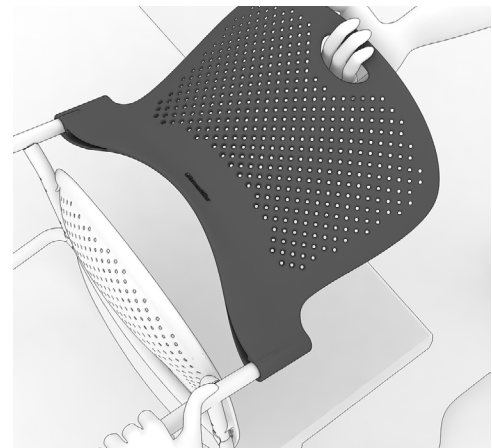


4. Pull back off frame posts.

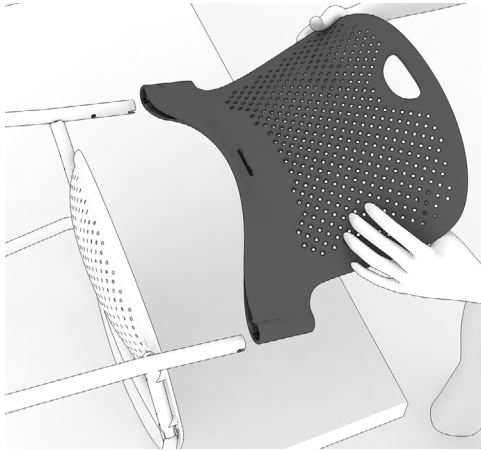

5. Remove the back properly.

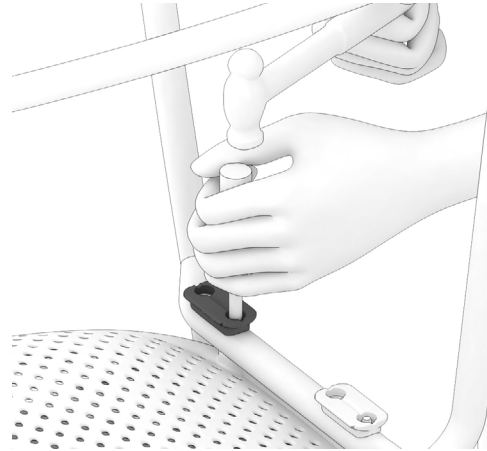

6. Using 1/8" punch and hammer, drive post fastener from push on fastener in bumper. Repeat procedure for other post fasteners.

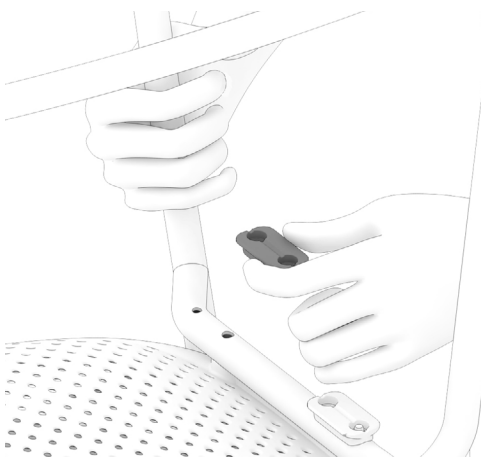

7. Remove bumpers from bottom of frame.



8. Remove the seat.