



## Parts Included:




Back Assembly




Back Bolt


## Tools Required:

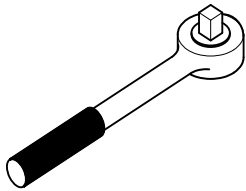

Ratchet Wrench

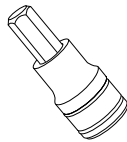

M5 Hex Bit

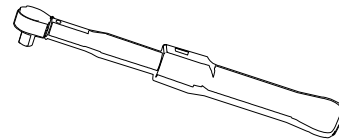

Torque Wrench

## Steps:



1. Remove the back bolts using 5mm Hex bit.



2. Remove four bolts.



3. Detach the back from the chair.

## Re-Assembly Steps:



4. Install back assembly.



5. Install four back bolts using a torque wrench and a 5 mm hex bit. Torque each bolt to 150 in-lbs.